


◆ String-Height adjustment

First loosen the saddle-fastening screw ②, and then adjust the height of saddle by twisting much the same with two heightening screws ① and set it in parallel with plate. After the adjustment of the height to your liking, tighten with the fastening screw ② to fix the saddle.

◆ Octave adjustment

First loosen the saddle-fastening screw ②, and then adjust with the octave-adjusting screw ③. After the adjustment, tighten with the fastening screw ② to fix the saddle.

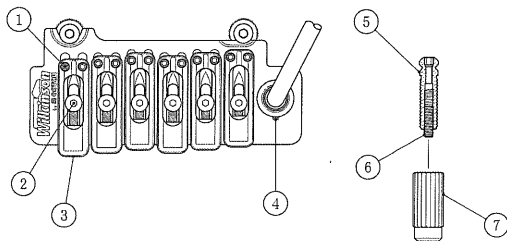

CAUTION

1. Ensure that you loosen the saddle-fastening screw ②, before adjusting with the heightening screw ③, or else it results in breaking it down the bar-nut and causing undesirable operation.
2. DO NOT drive the saddle-fastening screw ② too much, in order to prevent damage to the bar-nut that may causing undesirable operation.

◆ Arm adjustment

Push in arm and rotate it clockwise when it touches the bottom screw and adjust height as desired, and adjust with the arm-fastening screw ④ on the side of arm-holder to your liking, then use it. To remove it, rotate it counterclockwise and pull out if it removes from the bottom screw.

GOTOH Stud Lock (Pat.)

Upon setting bridge unit, tighten set screw ⑤ on the stud bolt ⑥ by 1.5mm allen wrench and fix thread clearance.