

1. String-Height adjustment

Adjust the height of the saddle with the two heightening screw ①, by twisting much the same and set it in parallel with the plate.

2. Octave adjustment


I) Screw into the saddle with the saddle-adjusting bolt ③ attached as far as reaching the saddle-fastening screw ②.

II) Loosen the saddle-fastening screw ②.

III) Control the position of the saddle by turning the saddle-adjusting bolt ③.

IV) After the adjustment, tighten with the saddle-fastening screw ② to fix the saddle.

V) Pull out the saddle-adjusting bolt ③.

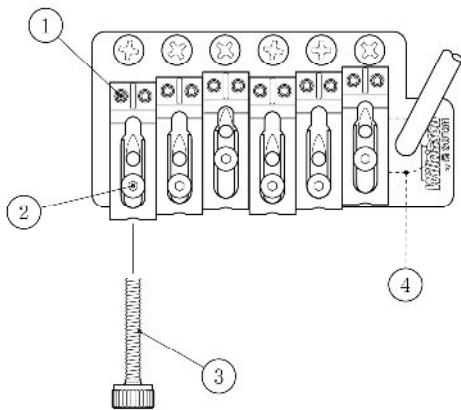

CAUTION : Ensure that you loosen the saddle-fastening screw ②, before the adjustment, or else it results in breaking down the saddle-fastening screw ② and warping the saddle and causing undesired operation.

3. Arm adjustment

Adjust with arm-fastening screw ④ on the back of the block to your liking.

